



Removal

- 1 Pry bottom reveal molding toward center of car out of front panel pillar with a plastic wedge.

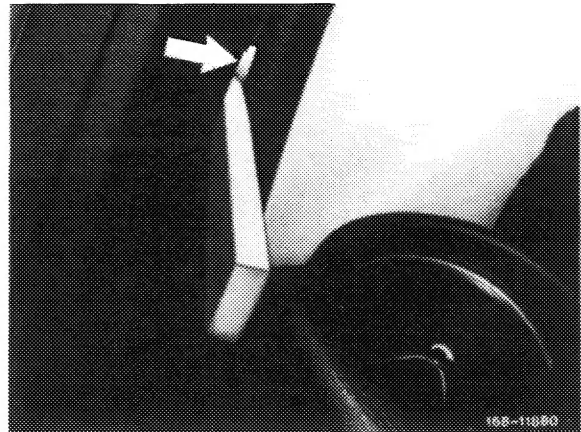

- 2 Pry upper reveal molding out of front wall pillar.
- 3 Press bottom reveal molding forward toward windshield, so that upper reveal molding can be lifted out of trim.

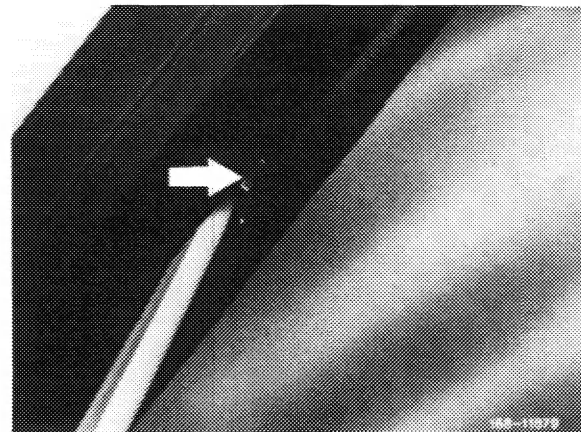

Installation

- 4 Install in reverse sequence.